




BBCXFHXX FULL HEIGHT BLIND CORNER CABINETS

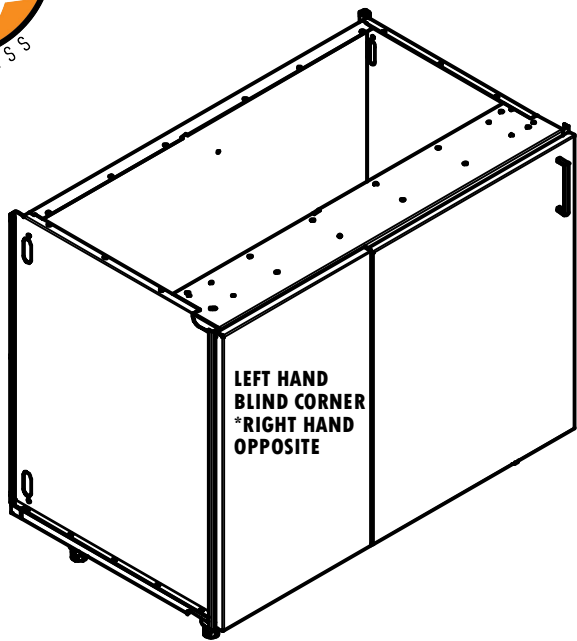


CABINET TAG	DESCRIPTION
BBCRFH42	BLIND CORNER BASE CABINET , RIGHT, FULL HT DOOR, HALF DEPTH CORNER, 42in WD
BBCLFH42	BLIND CORNER BASE CABINET , LEFT, FULL HT DOOR, HALF DEPTH CORNER, 42in WD
BBCRFH51	BLIND CORNER BASE CABINET , RIGHT, FULL HT DOOR, FULL DEPTH CORNER, 51in WD
BBCLFH51	BLIND CORNER BASE CABINET , LEFT, FULL HT DOOR, FULL DEPTH CORNER 51in WD


NOTES:
STAINLESS SOFT CLOSE HINGES
SPECIFY BBCRFHXX FOR RIGHT HAND BLIND CORNER
SPECIFY BBCLFHXX FOR LEFT HAND BLIND CORNER
LEFT HAND HALF DEPTH CORNER SHOWN

3X HINGES PER DOOR ON FULL HEIGHT DOORS



FOR 28" EXTRA DEEP CABINET BODY SPECIFY BBCRFHXX28 OR BBCLFHXX28
**** ADD 4" TO WIDTH FOR 28" DEEP BLIND CORNER CABINETS
XX = WIDTH
24" DRAWER DEPTH INSIDE 28" EXTRA DEEP CABINETS

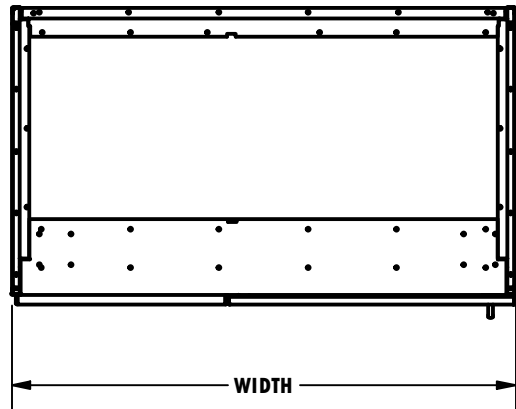

WIDTH
*** ADD 4" TO WIDTH FOR 28" DEEP CABINET BODIES

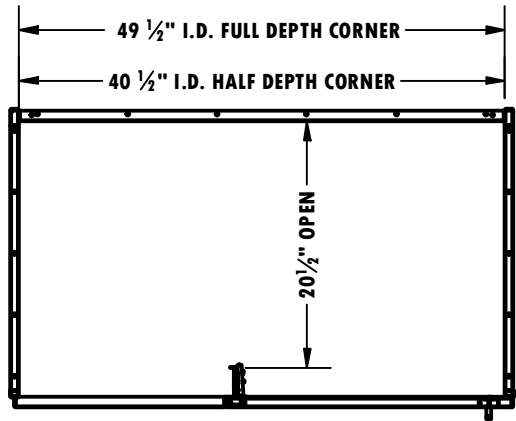

SECTION AN-AN
SCALE 3/4" = 12"

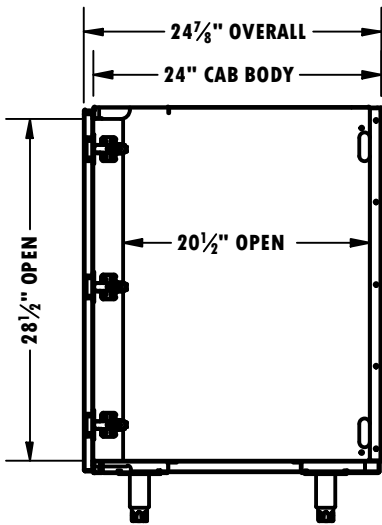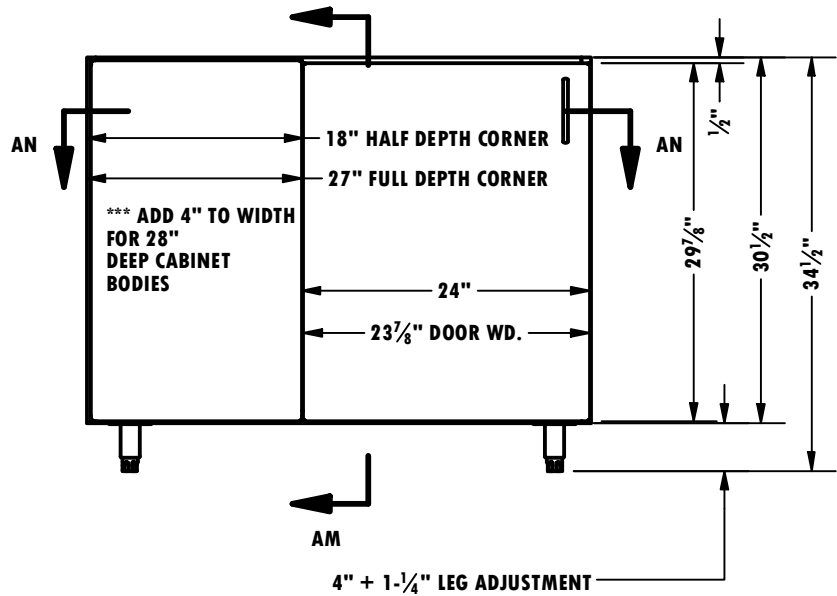

SECTION AM-AM
SCALE 3/4" = 12"